

AUTOMATIC AIR VALVE MODEL SEGEV S-050 , S-052 MAINTENANCE INSTRUCTIONS



GENERAL INSTRUCTIONS

1. Routine service is an integral part of the standard procedure of maintenance of a water supply system.
2. Recommended routine maintenance – ones or twice a year, according to the quality and kinds of the fluids in the system.

PROCEDURE:

1. Close the service valve under the valve base, before the servicing.
2. Turn , release and remove the valve body (1) and open the cover and sleeve.
3. Check the integrity of the rolling seal (4) by washing it with water . Replace the rolling seal in case it is torn.
4. Check and wash the body (1) the sleeve (2)and the float (6) with clean water.
5. Do not forget to open the service valve after the servicing.

PARTS SPECIFICATIONS

NO.	DESCRIPTION	MATERIALS
1	BODY	DUCTILE IRON
2	SLEEVE	REINFORCED NYLON
3	THREAD.OUTLET	BRASS
4	ROLLING SEAL	RUBBER EPDM
5	CLAMPING STEM	REINFORCED NYLON
6	FLOAT	FOAMED POLYPROPYLENE
7	O-RING	BUNA-N
8	BASE	STAINLESS STEEL
9	FILTER	NYLON

